


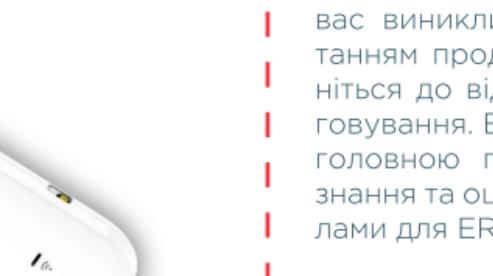

LTE USB WI-FI РОУТЕР  
ІНСТРУКЦІЯ З ЕКСПЛУАТАЦІЇ

WO23-CRC9



УКР

ENG

RUS

ESP

DEU

FR

PT

IT

NL

GR

ES

TR

RO

HR

CZ

SK

SI

PL

LT

LV

EL

HU

SI

УКР

ENG

RUS

ESP

DEU

FR

PT

IT

NL

GR

ES

TR

RO

HR

CZ

SK

SI

PL

LT

LV

EL

HU

SI

УКР

ENG

RUS

ESP

DEU

FR

PT

IT

NL

GR

ES

TR

RO

HR

CZ

SK

SI

PL

LT

LV

EL

HU

SI

УКР

ENG

RUS

ESP

DEU

FR

PT

IT

NL

GR

ES

TR

RO

HR

CZ

SK

SI

PL

LT

LV

EL

HU

SI

УКР

ENG

RUS

ESP

DEU

FR

PT

IT

NL

GR

ES

TR

RO

HR

CZ

SK

SI

PL

LT

LV

EL

HU

SI



## LTE USB WI-FI ROUTER USER MANUAL

WO23-CRC9



EN

### CONTENTS

<b>Safety Instructions</b>	18
<b>What is Included</b>	19
<b>Main unit description</b>	19
<b>SIM Card instalation</b>	20
<b>Using a modem</b>	22
<b>Setting up Wi-Fi connection</b>	23
<b>Device management</b>	24
<b>Troubleshooting</b>	25
<b>Environmental security.</b>	26
<b>Recycling</b>	26

Dear user,

Thank you for choosing ERGO product. Your choice is very important for us and this means that ERGO has a new user. We hope you will enjoy our products and services. We also hope that you'll take the opportunity to express your wishes and feedback about our product through the official ERGO hotline, which help us to improve the quality of our products and services. If you have any problems using our product, please contact our service department. Your support is our main advantage, and your recognition and evaluation are excellent motivation for ERGO.

Sincerely,

ERGO sales department.

### SAFETY INSTRUCTIONS

Please read the recommendations below to extend the life of the product.

- 1. Do not disassemble or replace the original components of the product.
- 2. Do not place the product in water or any other liquid, as this product is not waterproof.
- 3. Unplug the product from another device if it gets into the liquid, as this may cause a fire or an electric shock if the user continues to use it.
- 4. When installing the product, make sure that your hand is dry to avoid electrical shock.
- 5. Do not hold the product near a source of heat or fire.
- 6. Do not hold the product in a strong magnetic field, as this may lead to incorrect operation of the device.

### WHAT IS INCLUDED

Please read the recommendations below to extend the life of the product.

- 1. Insert the SIM card
- 2. Plug the Wingle into the USB ports of your PC with right position as blow.
- 3. Replace the cover and slide it into place.

### USING A MODEM

Red means the Wingle is with NO SIM card or you have inserted the wrong operator's SIM card and your network is locked.

- Red blinking means the Wingle is searching network.

### MAIN UNIT DESCRIPTION

When unplugging the device from the computer, remove it gently to protect the Wingle and the USB port of the computer.

### TROUBLESHOOTING

If you are having trouble with the Wingle, follow these steps:

1. Unplug the product from another device if it gets into the liquid, as this may cause a fire or an electric shock if the user continues to use it.
2. When installing the product, make sure that your hand is dry to avoid electrical shock.
3. Unplug the product from another device if it gets into the liquid, as this may cause a fire or an electric shock if the user continues to use it.
4. When installing the product, make sure that your hand is dry to avoid electrical shock.
5. Do not hold the product near a source of heat or fire.
6. Do not hold the product in a strong magnetic field, as this may lead to incorrect operation of the device.

### ENVIRONMENTAL SECURITY.

You can help to protect the environment! Please observe the rules: hand over non-operational electrical equipment to the appropriate waste disposal center. The manufacturer reserves the right to make changes to specifications and product design.

### RECYCLING

DO NOT remove the SIM card when the Wingle is plugging in the PC as this may damage the card and the Wingle.

### DEVICE MANAGEMENT

1. Make sure the end-user device is connected to the Wingle.

2. Open the browser, enter <http://192.168.8.1> in the address box.

3. Select the wireless network connection with the Wingle's SSID and click «Connect». If the security mechanism is applied, you need to enter the correct network key. The **SSID and network key** are printed on the device label.

### USB CONNECTOR

1. Wait for a few seconds until the signal indicator light turn to green which means the Wingle is connected to the network.

2. Enter the password, and click "login". The administrator has the right to check and modify configuration permission.

### WIFI LED INDICATOR

Green means the WiFi is open.

### SIGNAL LED INDICATOR

• Green means the Wingle is connected to 4G or 3G network.

### WHAT IS INCLUDED

1. If you are on the journey or you can't use a computer, our modem can be used with any mobile phone charger with USB port (5V and >1A).

2. The maximum operating temperature of the MiFi is 35°C.

3. This equipment is in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC.

### ПІДТРИМУВАНИЙ ДІАПАЗОН:

TDD LTE: 38, 39, 40, 41;  
FDD LTE: 1, 2, 3, 4, 5, 6, 7, 8, 20,  
28ab;  
WCDMA: 1, 8;

### РІВЕНЬ ПОТУЖНОСТІ:

TDD-LTE/FDD-LTE, клас потужності 3 (23 +/−3 dBm)  
UMTS клас потужності 3 (23 +/−2dBm)

### THE EXTERNAL ANTENNA PORT

Екстремальна робоча температура: −10 °C~+55 °C

### ВИХІДНА ПОТУЖНІСТЬ Wi-Fi:

802.11b: 14,83 dBm при 11 Мбіт/с  
802.11g: 14,30 dBm при 54 Мбіт/с  
802.11n: 14,23 dBm при 72 Мбіт/с

### ЧУЛІВІСТЬ Wi-Fi:

WIFI IEEE 802.11b(11M): -76 dBm @ 8% BER  
WIFI IEEE 802.11g(54M): -65dBm@ 10% BER  
WIFI IEEE 802.11n(72,2M): -64 dBm @ 10% BER

### SETTING UP WI-FI CONNECTION

1. Insert the SIM card  
2. Plug the Wingle into the USB ports of your PC or power adapter

3. Select the wireless network connection with the Wingle's SSID and click «Connect».

4. Enter the password, and click "login". The administrator has the right to check and modify configuration permission.

### DISCONNECTING FROM NETWORK

1. Unplug the Wingle from the computer.  
2. The default User Name and Password is **admin**.

### NOTE

Red means the Wingle is with NO SIM card or you have inserted the wrong operator's SIM card and your network is locked.

### CONNECTING TO A MODEM

1. Insert the SIM card  
2. Plug the Wingle into the USB ports of your PC with right position as blow.

### NOTE

Red means the Wingle is with NO SIM card or you have inserted the wrong operator's SIM card and your network is locked.

### MAIN UNIT DESCRIPTION

When unplugging the device from the computer, remove it gently to protect the Wingle and the USB port of the computer.

### THE EXTERNAL ANTENNA PORT

When unplugging the device from the computer, remove it gently to protect the Wingle and the USB port of the computer.

### ENVIRONMENTAL SECURITY.

You can help to protect the environment! Please observe the rules: hand over non-operational electrical equipment to the appropriate waste disposal center. The manufacturer reserves the right to make changes to specifications and product design.

### RECYCLING

DO NOT remove the SIM card when the Wingle is plugging in the PC as this may damage the card and the Wingle.

### DEVICE MANAGEMENT

1. Make sure the end-user device is connected to the Wingle.

2. Open the browser, enter <http://192.168.8.1> in the address box.

3. Select the wireless network connection with the Wingle's SSID and click «Connect». If the security mechanism is applied, you need to enter the correct network key. The **SSID and network key** are printed on the device label.

### USB CONNECTOR

1. Wait for a few seconds until the signal indicator light turn to green which means the Wingle is connected to the network.

2. Enter the password, and click "login". The administrator has the right to check and modify configuration permission.

### WIFI LED INDICATOR

Green means the WiFi is open.

### SIGNAL LED INDICATOR

• Green means the Wingle is connected to 4G or 3G network.

### WHAT IS INCLUDED

1. If you are on the journey or you can't use a computer, our modem can be used with any mobile phone charger with USB port (5V and >1A).

2. The maximum operating temperature of the MiFi is 35°C.

### ПІДТРИМУВАНИЙ ДІАПАЗОН:

TDD LTE: 38, 39, 40, 41;  
FDD LTE: 1, 2, 3, 4, 5, 6, 7, 8, 20,  
28ab;

### РІВЕНЬ ПОТУЖНОСТІ:

TDD-LTE/FDD-LTE, клас потужності 3 (23 +/−3 dBm)

### THE EXTERNAL ANTENNA PORT

Екстремальна робоча температура: −10 °C~+55 °C

### ВИХІДНА ПОТУЖНІСТЬ Wi-Fi:

802.11b: 14,83 dBm при 11 Мбіт/с  
802.11g: 14,30 dBm при 54 Мбіт/с  
802.11n: 14,23 dBm при 72 Мбіт/с

### ЧУЛІВІСТЬ Wi-Fi:

WIFI IEEE 802.11b(11M): -76 dBm @ 8% BER  
WIFI IEEE 802.11g(54M): -65dBm@ 10% BER  
WIFI IEEE 802.11n(72,2M): -64 dBm @ 10% BER

### SETTING UP WI-FI CONNECTION

1. Insert the SIM card  
2. Plug the Wingle into the USB ports of your PC or power adapter

3. Select the wireless network connection with the Wingle's SSID and click «Connect».

### DISCONNECTING FROM NETWORK

1. Unplug the Wingle from the computer.  
2. The default User Name and Password is **admin**.

### CONNECTING TO A MODEM

1. Insert the SIM card  
2. Plug the Wingle into the USB ports of your PC with right position as blow.

### NOTE

Red means the Wingle is with NO SIM card or you have inserted the wrong operator's SIM card and your network is locked.

### MAIN UNIT DESCRIPTION

When unplugging the device from the computer, remove it gently to protect the Wingle and the USB port of the computer.

### THE EXTERNAL ANTENNA PORT

When unplugging the device from the computer, remove it gently to protect the Wingle and the USB port of the computer.

### ENVIRONMENTAL SECURITY.

You can help to protect the environment! Please observe the rules: hand over non-operational electrical equipment to the appropriate waste disposal center. The manufacturer reserves the right to make changes to specifications and product design.

### RECYCLING

DO NOT remove the SIM card when the Wingle is plugging in the PC as this may damage the card and the Wingle.

### DEVICE MANAGEMENT

1. Make sure the end-user device is connected to the Wingle.

2. Open the browser, enter <http://192.168.8.1> in the address box.

3. Select the wireless network connection with the Wingle's SSID and click «Connect». If the security mechanism is applied, you need to enter the correct network key. The **SSID and network key** are printed on the device label.

### USB CONNECTOR

1. Wait for a few seconds until the signal indicator light turn to green which means the Wingle is connected to the network.

2. Enter the password, and click "login". The administrator has the right to check and modify configuration permission.

### WIFI LED INDICATOR

Green means the WiFi is open.

### SIGNAL LED INDICATOR

• Green means the Wingle is connected to 4G or 3G network.

### WHAT IS INCLUDED

1. If you are on the journey or you can't use a computer, our modem can be used with any mobile phone charger with USB port (5V and >1A).

2. The maximum operating temperature of the MiFi is 35°C.

### ПІДТРИМУВАНИЙ ДІАПАЗОН:

TDD LTE: 38, 39, 40, 41;  
FDD LTE: 1, 2, 3, 4, 5, 6, 7, 8, 20,  
28ab;

### РІВЕНЬ ПОТУЖНОСТІ:

TDD-LTE/FDD-LTE, клас потужності 3 (23 +/−3 dBm)

### THE EXTERNAL ANTENNA PORT

Екстремальна робоча температура: −10 °C~+55 °C

### ВИХІДНА ПОТУЖНІСТЬ Wi-Fi:

802.11b: 14,83 dBm при 11 Мбіт/с  
802.11g: 14,30 dBm при 54 Мбіт/с  
802